

Manuale d'uso - Efficienza Energetica / User Manual - Energy Efficiency / Manuel de l'utilisateur - L'efficacité énergétique / Handbuch - Energieeffizienz / Handboek - Energie-efficiëntie Manual - Eficiencia Energética / Manual - Eficiência Energética / Manuell - Energieeffektivitet / Manuell - Energieeffektivitet / Manuaalinen - Energy Efficiency / Manual – Energieeffektivitet Руководство - Энергоэффективность / Käsiraamat - Energiatõhususe / Rokasgrāmata - Energoefektivitātes

Table with 16 columns (PF, IT, EN, FR, DE, NL, ES, PT, SV, NO, FI, DK, RU, ET, LV) and multiple rows. It contains technical specifications for a hood, including efficiency classes (AEChood, EEC, FDEhood, FDEC, LEhood, LEC, GFehood, GFEC, Qmin, Qmax, Qboost, SPEmin, SPEmax, SPEboost, P0, Ps, PI, F, Qbep, Pbep, Qmax, Wbep, WL, Emiddle, Lwa), consumption, and noise levels. Each cell contains numerical values and units, along with detailed technical descriptions in multiple languages.

Посібник користувача - Енергоефективність / Vadovas - Energijos vartojimo efektyvumo / Manwal ghall-Utent - Effiċjenza fl-Energija / Kézi - Energiahatékonyaság / Příručka - Energetická účinnost

Priručka - Energetická účinnost / Manual - Eficientă Energetică / Ręczny - Efektywność energetyczna / Priručnik - Energetska efikasnost / Navodilo - Energetska učinkovitost

Ευχρηστίο - Ευεργετική Αποδοτικότητα / Manuel - Energi Verimliliği / Наръчник - Энергия ефektivност / Упутство - Енергетска ефикасност / Lámhleabhar Úsáideoir - Éifeachtúlacht Fuinnimh

Table with 17 columns: S, M, AEChood, EEC, FDEhood, FDEC, LEhood, LEC, GFehood, GFEC, Qmin, Qmax, Qboost, SPEmin, SPEmax, SPEboost, PO, Ps, F, EEIhood, Qbep, Pbeq, Qmax, Wbeq, WL, Emiddle, Lwa, UA, LT, MT, CZ, SK, RO, PL, HR, SL, GR, TR, BG, SR, TA. Each column contains technical specifications in multiple languages, including energy efficiency ratings, power consumption, and flow rates.